

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 1 - of 21
Revision:	V2.4	Confidential:	External Documentation

MEITRACK® GPS Vehicle Tracker



User Guide V2.4

MVT380

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 2 - of 21
Revision:	V2.4	Confidential:	External Documentation


Contents

1.	Copyright and Disclaimer	3 -
2.	Applications	3 -
3.	Product Function and Specifications.....	3 -
3.1	Product Function.....	3 -
3.2	Specifications	4 -
4.	MVT380 and Accessories	5 -
5.	View.....	5 -
6.	First Use	5 -
6.1	Install SIM Card	5 -
6.2	Charging	6 -
6.3	LED Indications	6 -
6.4	Track by Calling.....	6 -
6.4.1	Multiple Phone numbers– A71	8 -
6.4.2	Listening-in (Voice Monitoring)–A72.....	8 -
6.4.3	Sleep Mode – A73	8 -
6.4.4	Geo-fence Alarm – B05.....	9 -
6.4.5	Set Anti-theft – B21.....	9 -
6.4.6	Time Zone– B35	9 -
6.5	Configure by Computer	10 -
6.5.1	SMS Tracking	11 -
6.5.2	GPRS Tracking.....	15 -
7	Installation	17 -
7.1	Install I/O Cable	17 -
7.1.1	Power/GND (PIN7/PIN8)	18 -
7.1.2	Digital Input (PIN1/PIN2/PIN3 Negative Triggering)	18 -
7.1.3	Digital Input (PIN4/PIN5 Positive Triggering)	19 -
7.1.4	Output (PIN9/PIN10/PIN11/PIN12/PIN13).....	19 -
7.1.5	Analog Input (PIN6/PIN14)	19 -
7.2	Install GPS/GSM Antenna.....	20 -
7.3	Install Microphone and Speaker (Optional).....	20 -
7.4	Mount the MVT380 unit	21 -

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 3 - of 21
Revision:	V2.4	Confidential:	External Documentation

1. Copyright and Disclaimer

Copyright © 2012 MEITRACK. All rights reserve

MEITRACK and  are trademarks that belong to Shenzhen Meiligao Electronics Co., Ltd.

The user manual may be changed without prior notification.

This user manual, or any part thereof, may not be reproduced for any purpose whatsoever without the written authorization of Meiligao (MEITRACK), or transmitted in any form, either electronically or mechanically, including photocopying and recording.

In no event shall Meiligao (MEITRACK) be liable for direct, indirect, special, incidental, or consequential damages (including but not limited to economic loss, personal injury, and loss of asset and property) arising out of the use or inability or illegality to use the product or documentation.

2. Applications

- ☐ Vehicle Real Time Tracking
- ☐ Car Security/Anti-Hijack
- ☐ Fleet Management

3. Product Function and Specifications

3.1 Product Function

- ☐ SiRF III GPS and Quad Band GSM 850/900/1800/1900Mhz
- ☐ AGPS (with GSM Base Station ID)
- ☐ Track by SMS/GPRS (TCP/UDP) (MEITRACK Protocol)
- ☐ Track on Demand
- ☐ Track by Time Interval
- ☐ Track by Distance Interval
- ☐ Track on Mobile Phone
- ☐ Listen-in (Voice Monitoring) or Two-way Audio (Optional)
- ☐ Internal 4Mb Memory for Logging
- ☐ Inbuilt Motion Sensor
- ☐ 850mAh Internal Backup Battery
- ☐ SOS Alarm
- ☐ Geo-fence Alarm
- ☐ GPS Blind Area Alarm
- ☐ Low Battery Alarm
- ☐ Speeding Alarm

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 4 - of 21
Revision:	V2.4	Confidential:	External Documentation


- ☐ Impact Alarm
- ☐ Tow Alarm
- ☐ GPS Antenna Cut Alarm
- ☐ External Power Cut Alarm
- ☐ Mileage Report
- ☐ Engine Cut (Engine immobilization)
- ☐ Inbuilt Super Magnet (optional)
- ☐ 5 Digital Inputs (2 positive triggering and 3 negative triggering), 5 Outputs.
- ☐ 2 Analog Input Detection

3.2 Specifications


Items	Specifications
Dimension	105*65*26mm
Weight	190g
Charging Voltage	DC 9V~36V/1.5A
Back-up Battery	850mAh/3.7V
Power consumption	65mA standby current
Operating Temperature	-20°C~55°C
Humidity	5%~95%
Work Time	43 hours in power-saving mode and 10 hours in normal mode
LED	2 LED lights to show GPS, GSM and other status
Button	1 SOS and 1 power on/off
Microphone	Optional
Memory	4M Byte
Sensor	Motion sensor & Impact sensor
GSM Frequency	GSM 850/900/1800/1900MHz
GPS Chip	Latest GPS SIRF-Star III chipset
GPS Sensitivity	-159dB
Positioning Accuracy	10 meters, 2D RMS
I/O	5 Digital Input (2 positive triggering and 3 negative triggering) 2 Analog Input Detection 5 Output 1 USB port

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 5 - of 21
Revision:	V2.4	Confidential:	External Documentation

4. MVT380 and Accessories

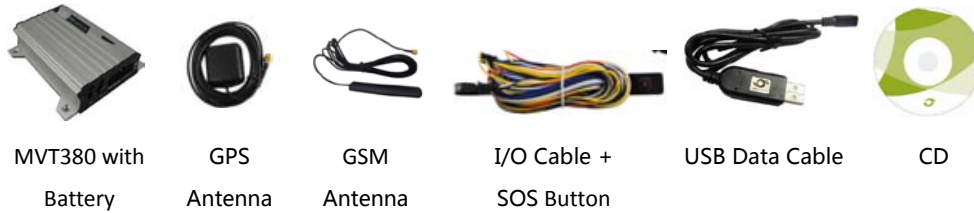

5. View

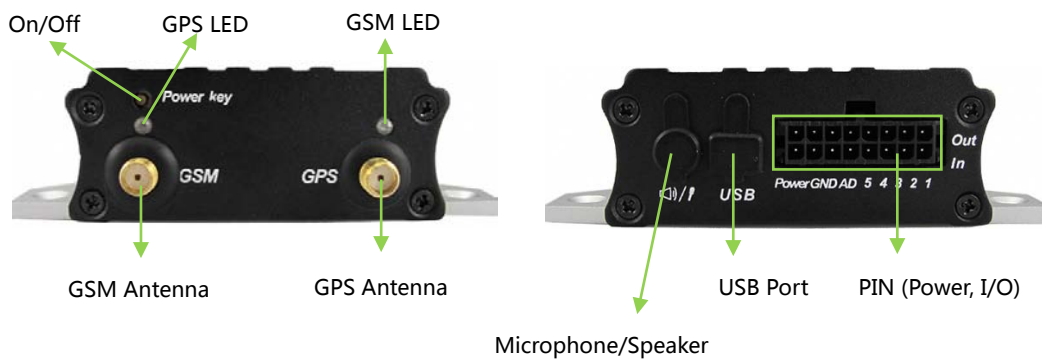

6. First Use

6.1 Install SIM Card

Check that the SIM has not run out of credit (test the SIM in a phone to make sure it can send and receive SMS);

Check that the SIM Lock code is turned off;


If you require the function of sending an SMS location report to the authorized phone number when it makes a call to the MVT380, please make sure the SIM installed supports displaying caller ID.

Before installing the SIM card, turn off the power for MVT380.

Unscrew and remove cover.

Insert the SIM card by sliding it into the card holder with the chip module facing to the connectors on PCB.

Replace the cover and screw it in.

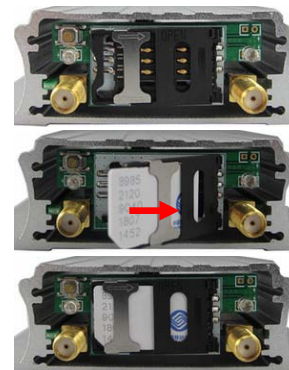

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 6 - of 21
Revision:	V2.4	Confidential:	External Documentation

6.2 Charging

Please connect GND (-Black) and Power (+Red) wires to 12V or 24 external power and make sure to charge the battery for at least 3 hours. 8 hours is highly appreciated.

Configuration and testing suggested prior to installation.

6.3 LED Indications

Press and hold the Power On/Off button for 3~5 seconds to turn on/off MVT380.



GPS LED (Blue)	
On	One button is pressed or input is active.
Flashing (every 0.1 second)	Initializing or back-up battery power is low
Flashing (0.1 second on and 2.9 seconds off)	MVT380 has a GPS fix
Flashing (1 second on and 2 seconds off)	MVT380 has no GPS fix
GSM LED (Green)	
On	A call is coming in / a call is being made
Flashing (every 0.1 second)	Initializing
Flashing (0.1 second on and 2.9 seconds off)	MVT380 is connected to the GSM network
Flashing (1 second on and 2 seconds off)	MVT380 is not connected to the GSM network

6.4 Track by Calling

Make a call to MVT380 and it will report with one SMS.

For example,

Now,110727 02:48,V,16,23Km/h,61%,<http://maps.google.com/maps?f=q&hl=en&q=22.540103,114.082329&ie=UTF8&z=16&iwloc=addr&om=1>



File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 7 - of 21
Revision:	V2.4	Confidential:	External Documentation


Click on the link then the location can be shown directly on Google Maps on your mobile phone.

Report description:

Now,110727 02:48,V,16,23Km/h,61%,<http://maps.google.com/maps?f=q&hl=en&q=22.540103,114.082329&ie=UTF8&z=16&iwloc=addr&om=1>

Content	Description	Note
Now	Current Location	Alarm Type
110721 16:40	Date & Time: 21 July, 2011, 16:40pm	Date & Time in YYMMDD HH:MM
V	No GPS fixed	GPS Status Indicator: A = valid, V = invalid
10	GSM signal=10	GSM Signal. Decimal Digit (0~31)
0Km/h	Speed=0	KM/h. Decimal digit
97%	Battery Power: 97%	Battery Power Balance (Percentage)
http://maps.google.com/maps?f=q&hl=en&q=22.540103,114.082329&ie=UTF8&z=16&iwloc=addr&om=1	Latitude: 22.513015 Longitude: 114.057235	Google Maps Web Link with Latitude and Longitude. Click on the link to get the location.

If your mobile cannot visit HTTP websites, input the latitude and longitude into Google Maps as the following picture shows to get the position:

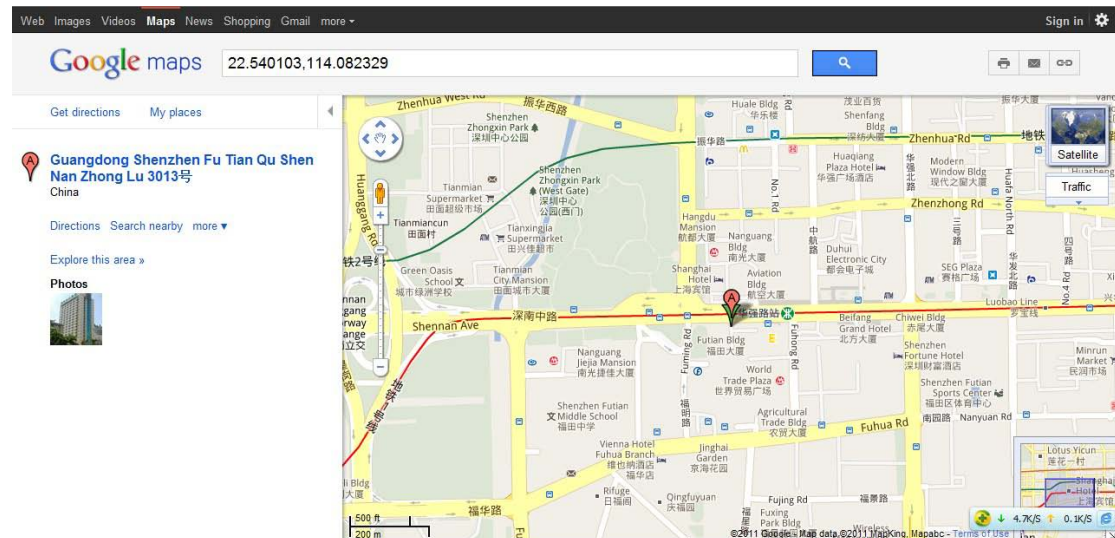

More SMS commands

You can configure MVT380 by mobile phone or by computer using the MEITRACK Parameter Editor.

For more details, please refer to part 6.5 **Configure by Computer**.

Note:

1. Password is 4 digits only and defaulted as 0000. You can change the password by Parameter Editor and SMS command.

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 8 - of 21
Revision:	V2.4	Confidential:	External Documentation

2. *MVT380 will only accept commands from a user with the correct password and report SMS report to the user. If preauthorized phone number was set, only this phone number can receive SMS reports.*

6.4.1 Multiple Phone numbers– A71

Command: 0000, A71, phone number 1, phone number 2, phone number 3

SMS Get: IMEI, A71, OK

Note:

Authorize a phone number for SOS alarm, calling for location report, geo-fence alarm, and low battery alarm.

Phone Number: Max 16 characters.

If no preset phone number, it is empty (default is empty).

Send command "0000, A71" to delete all phone numbers.

When the SOS button is pressed, MVT380 will make a call to phone number 1, 2 and 3. It will stop calling when one number answers.

Example: 0000,A71,13811111111,13822222222,13833333333

SMS Get: 353358017784062,A71,OK

6.4.2 Listening-in (Voice Monitoring)–A72

Command: 0000, A72, phone number 1, phone number 2

SMS Get: IMEI, A72, OK

Note:

Authorize a phone number to make a silent call to the tracker. The tracker will answer the call automatically and allows the caller to listen to what is happening around the tracker. There is no sound when the tracker is working.

Phone Number: 2 monitoring numbers at the most can be set, 16 characters per number.

If no preset phone number, it is empty (default).

If no phone number, but has ",", the number related to this "," is deleted.

Send command "0000, A72" to delete all phone numbers.

Example: 0000,A72,13844444444,13855555555

SMS Get: 353358017784062,A72,OK

6.4.3 Sleep Mode – A73

Command: 0000,A73,X

SMS Get: IMEI,A73,OK

Note:

This setting is for power saving.

X=0, turn off sleep mode (default)

X=1, normal sleep. GSM module work, GPS module work by sleep mode intermittently. The device can work 25% longer than no sleep mode. Note: this is not recommended for users who set "track by interval" or short time interval, because it will affect the completeness of tracking.

X=2, deep sleep, the tracker will enter this mode after it is inactive or stationary(No SOS/any triggered by the

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 9 - of 21
Revision:	V2.4	Confidential:	External Documentation

button/input/incoming calls/message/movement) for 5 minutes. GPS module stops working and GSM module enters sleep mode. The tracker remains in this mode until it is activated by SOS/any triggered by the button/input/incoming calls/message/movement. After that, it will repeat above processes.

Note: In any condition, the device will directly quit the sleep mode and back to normal working mode by SMS or GPRS command to turn off the sleep mode.

Example: 0000,A73,2

SMS Get: 353358017784062,A73,OK

6.4.4 Geo-fence Alarm – B05

Command: B05,P,latitude,longitude,radius,in,out

SMS Get: IMEI,B05,OK

Note:

P: 1 to 8. Max 8 Geo-fence waypoints can be set.

Latitude: Latitude in decimal degrees of the waypoint center.

Longitude: Longitude in decimal degrees of the waypoint center.

Radius: [1, 4294967295] in meters.

In = 0, turn off the alarm when the tracker enters the waypoint;

In = 1, turn on the alarm when the tracker enters the waypoint.

Out = 0, turn off the alarm when the tracker exits the waypoint;

Out = 1, turn on the alarm when the tracker exits the waypoint.

Example: 0000,B05,1,22.91319,114.07988,1000,0,1

SMS Get: 353358017784062,B05,OK

Once the tracker goes outside of the circle (center: 22.91319,114.07988 and radius 1000 meters), the following message will be received.

353358017784062,ExitGEO,22.918186,114.089823,080229123816,A,10,22,16,32,1,21,6667,850,,0000,,

6.4.5 Set Anti-theft – B21

Command: 0000,B21,Status

SMS Get: IMEI,B21,OK

Note:

Status=1, turn on Anti-theft (default); the device alarms when input 2 (negative input) and input 4 (positive input) are active;

Status=0, turn off Anti-theft; the device doesn't alarm when input 2 (negative input) and input 4 (positive input) are active.

6.4.6 Time Zone– B35

Command: 0000,B35,T

SMS Get: IMEI,B35,OK

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 10 - of 21
Revision:	V2.4	Confidential:	External Documentation

Note:

Default time of the tracker is GMT. You can use this command to change the time on your tracker to your local time. This command is for SMS tracking only.

Time zone of SMS report is separated with that of GPRS data. If you need to set time zone in GPRS data, please use SMS command: 0000, B36, T

T=0, to turn off this function.

T=[-32768,32767] to set time difference in minutes to GMT.

For those ahead of GMT, just input the time difference in minutes directly. For example, GMT+8, W000000,032,480

'-' is required for those behind GMT. For example, W000000,032,-120.

Example: 0000,B35,480

SMS Get: 353358017784062,B35,OK

For more details regarding SMS commands, please refer to MEITRACK SMS Protocol.

6.5 Configure by Computer

This part shows the basics of how to use the **MEITRACK Parameter Editor**.

Note: Don't connect MVT380 to external battery when configuring.

Please refer to the **MEITRACK Parameter Editor User Guide** for more detailed information regarding configuration and functions.

Run 'PL2303_Prolific_DriverInstaller' to install the driver for the USB data cable.


Note: PL2303_Prolific_DriverInstaller is in the folder 'USB-232 Driver' in the CD.

Connect the USB Data Cable between MVT380 and PC.




Open **Device Manager** (Device Manager is under Control Panel\System and Security\System). You can then find 'Prolific USB-to-Serial Comm Port' as the following picture shows.

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 11 - of 21
Revision:	V2.4	Confidential:	External Documentation

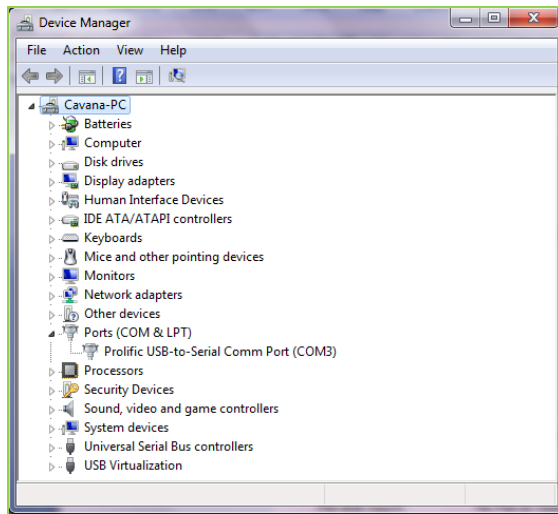

Note: Remember this Com number. It needs to be input into the MEITRACK Parameter Editor. It is COM3 in this example and it would be COM4 or COM5... in your computer.

Run 'MEITRACK Parameter Editor.exe' and the following configuration window will pop up:

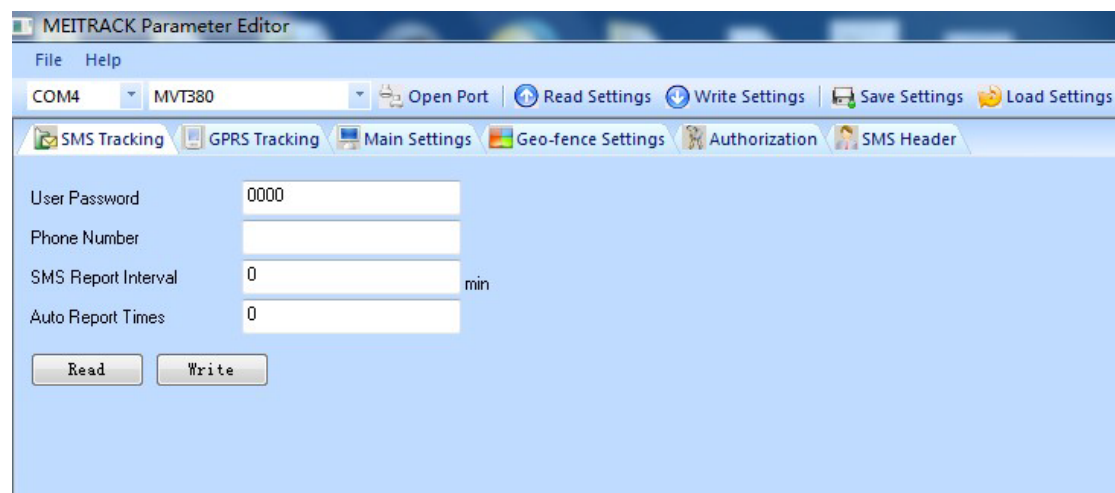

Choose the correct Com number and terminal type in previous Device Manager then click the 'Open Port' button. Click 'Read Settings' button to show the default or previous settings of the tracker.


Note: MEITRACK Parameter Editor is in the CD. The language will be automatically adjusted to be the same as your PC operation system's language. Please use "Ctrl+L" to change the language.

6.5.1 SMS Tracking

6.5.1.1 Track by Preset Interval

Click Tap I: SMS Tracking

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 12 - of 21
Revision:	V2.4	Confidential:	External Documentation

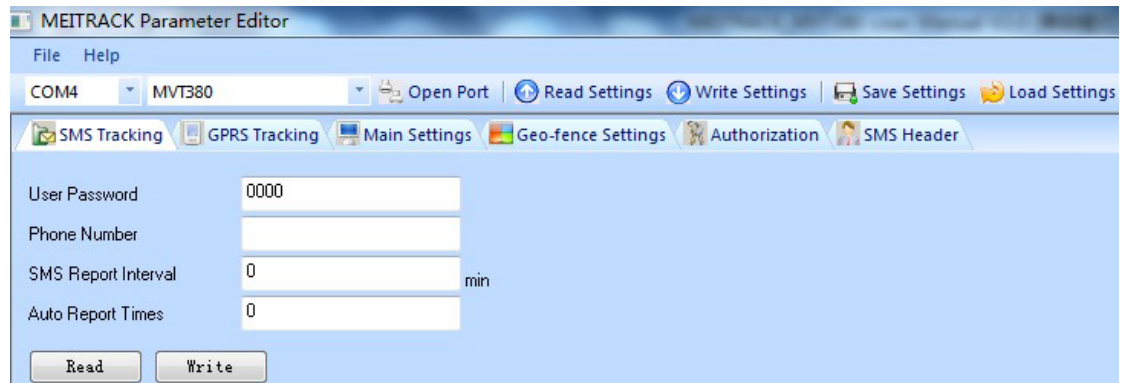


The screenshot shows the MEITRACK Parameter Editor software interface. It features a menu bar with 'File' and 'Help'. Below the menu is a toolbar with buttons for 'COM4', 'MVT380', 'Open Port', 'Read Settings', 'Write Settings', 'Save Settings', and 'Load Settings'. A tabbed interface at the bottom includes 'SMS Tracking' (selected), 'GPRS Tracking', 'Main Settings', 'Geo-fence Settings', 'Authorization', and 'SMS Header'. The main area contains input fields for 'User Password' (0000), 'Phone Number', 'SMS Report Interval' (0 min), and 'Auto Report Times' (0). At the bottom are 'Read' and 'Write' buttons.

Item	Description
User Password	SMS password for sending SMS commands and defaulted as 0000.
Phone Number	A phone number to receive SMS location reports.
SMS Report Interval	Track by time interval via SMS. Set time interval for SMS location report. = 0, stop tracking by time interval (default); = [1,65535], track by interval in minute.
Auto Report Times	= 0, unlimited times for report. = [1,255], it will stop reporting when reaching preset times
Read	Read current tracker's settings for above items.
Write	Write above settings to the tracker.

6.5.1.2 SMS Report

Click Tap V: Authorization

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 13 - of 21
Revision:	V2.4	Confidential:	External Documentation

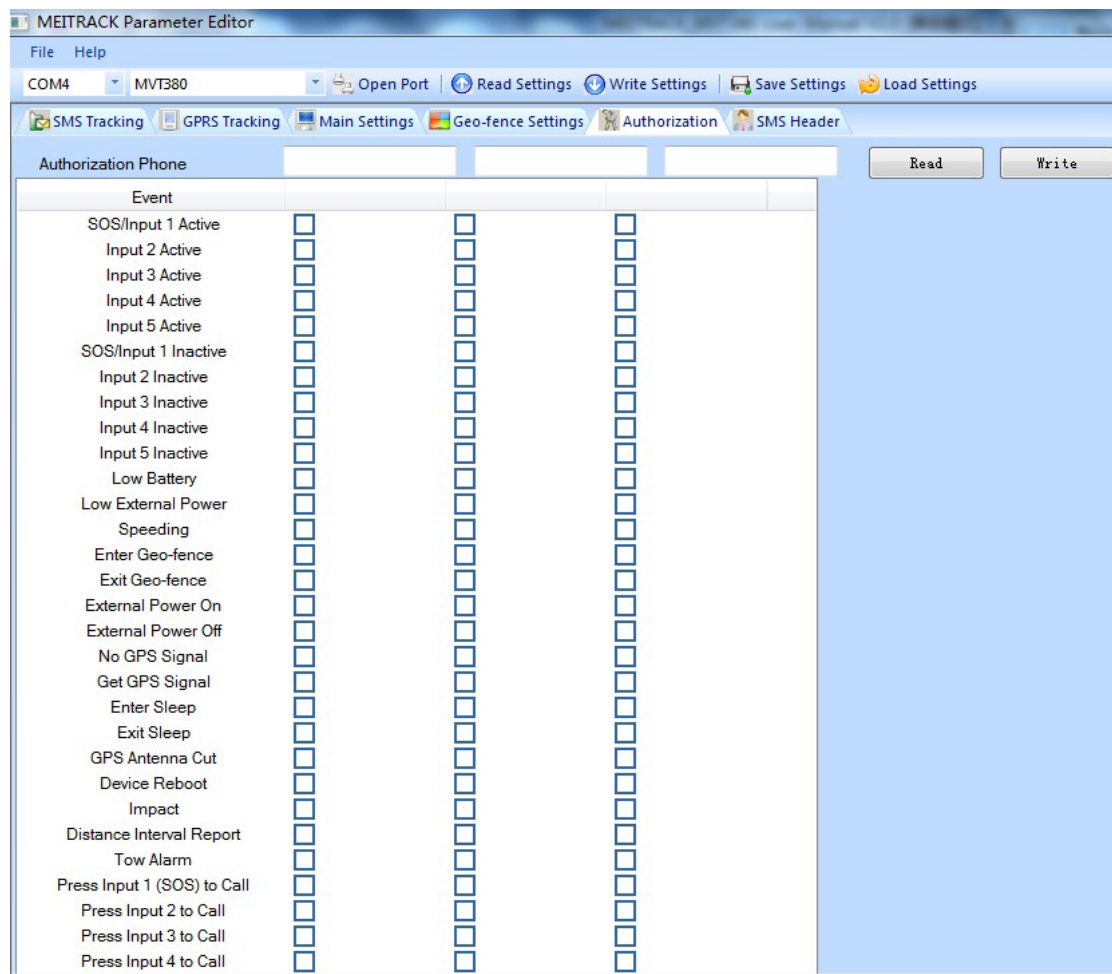

MEITRACK Parameter Editor

File Help

COM4 MVT380 Open Port Read Settings Write Settings Save Settings Load Settings

SMS Tracking GPRS Tracking Main Settings Geo-fence Settings Authorization SMS Header

Authorization Phone Read Write

Event	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SOS/Input 1 Active	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 2 Active	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 3 Active	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 4 Active	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 5 Active	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SOS/Input 1 Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 2 Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 3 Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 4 Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input 5 Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Low Battery	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Low External Power	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Speeding	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Enter Geo-fence	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Exit Geo-fence	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
External Power On	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
External Power Off	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
No GPS Signal	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Get GPS Signal	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Enter Sleep	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Exit Sleep	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
GPS Antenna Cut	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Device Reboot	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Impact	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Distance Interval Report	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tow Alarm	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Press Input 1 (SOS) to Call	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Press Input 2 to Call	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Press Input 3 to Call	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Press Input 4 to Call	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Item	Description
Authorization Phone	A phone number to receive selected event's SMS reports.
Event	Selected event's SMS reports will be sent to authorize phone number. For more details, please refer to MEITRACK GPRS/SMS Protocol. For description of events from SOS/Input 1 Active to Tow Alarm, please refer to tap II GPRS Tracking . Other events description, please refer to below chart.
Read	Read current tracker's settings for above items.
Write	Write above settings to the tracker.

Event Description:

Event	Description (If the box is ticked, authorized phone number will get event report by SMS or calling)
SOS/Input 1 Active	Report when input1 (SOS) is active/pressed.
Input 2 Active	Report when input 2 is active.

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 14 - of 21
Revision:	V2.4	Confidential:	External Documentation


Input 3 Active	Report when input 3 is active.
Input 4 Active	Report when input 4 is active.
Input 5 Active	Report when input 5 is active.
SOS/Input1 Inactive	Report when input 1 inactive (SOS released).
Input 2 Inactive	Report when input 2 inactive.
Input 3 Inactive	Report when input 3 inactive.
Input 4 Inactive	Report when input 4 inactive.
Input 5 Inactive	Report when input 5 inactive.
Low Battery	Report when backup battery's voltage is below 3.5V.
Low External Power	External power (car battery) is lower than predefined voltage. You can define voltage in Main Settings.
Speeding	Report when MVT380 speeds higher than the pre-set value. Value can be changed on tap III Main Settings
Enter Geo-fence	Report when MVT380 enters Geo-fence.
Exit Geo-fence	Report when MVT380 exits Geo-fence. Geo-fence can be changed on tap III Main Settings .
External Power On	Alarm when external power supply is on or recover.
External Power Off	Alarm when external power supply if off or cut.
No GPS Signal	Report when MVT380 enters GPS blind area or no GPS signal.
Get GPS Signal	Report when MVT380 exits GPS blind area or get GPS signal.
Enter Sleep	Report when MVT380 enters sleep mode.
Exit Sleep	Report when MVT380 exits sleep mode. Sleep mode can be changed on tap III Main Settings .
GPS Antenna Cut	Alarm when the GPS antenna is disconnected or cut
Device Reboot	Report when MVT380 is rebooting.
Impact	Alarm when MVT380 (with impact sensor) detects impact or crash
Heartbeat Report	Turn on heartbeat report You can define heartbeat interval on tap III Main Settings .
Heading Change Report	Auto report when MVT380's direction changes over predefined angle You can define angle degree on tap III Main Settings .
Distance Interval Report	Track by distance. Interval can be changed on tap III Main Settings .
Tow Alarm	Alarm when the tracker trembles for a period of time. You can define tow time on tap III Main Settings .
Press Input 1 (SOS) to call	Make a call to authorized phone number when press input 1 (SOS).
Press Input 2 to call	Make a call to authorized phone number when press input 2.
Press Input 3 to call	Make a call to authorized phone number when press input 3.
Press Input 4 to call	Make a call to authorized phone number when press input 4.
Press Input 5 to call	Make a call to authorized phone number when press input 5.
Reject Incoming Call	Hand up automatically incoming call from correspondent authorized

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 15 - of 21
Revision:	V2.4	Confidential:	External Documentation

	phone number.
Call for SMS Location Report	Reject incoming call or report SMS location when no answer.
Auto Answer Incoming Call	Auto answer the incoming call for conversation
Listen-in (voice monitoring)	Auto answer the incoming call for voice monitoring

6.5.2 GPRS Tracking

Click Tap II: GPRS Tracking

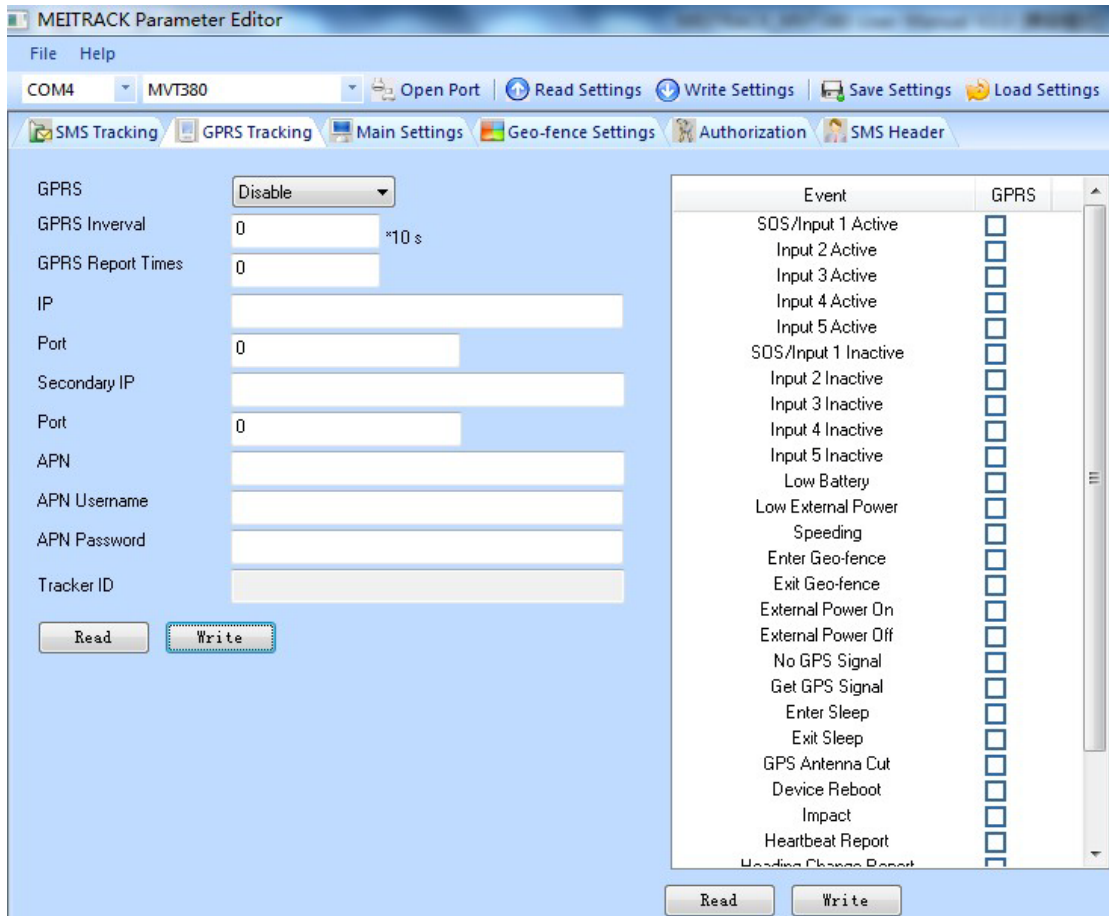

The screenshot shows the MEITRACK Parameter Editor software. The 'GPRS Tracking' tab is selected. On the left, there are input fields for GPRS settings: GPRS (set to 'Disable'), GPRS Interval (0), GPRS Report Times (0), IP, Port (0), Secondary IP, Port (0), APN, APN Username, APN Password, and Tracker ID. Below these fields are 'Read' and 'Write' buttons. On the right, there is a list of events with checkboxes for GPRS tracking. The events include: SOS/Input 1 Active, Input 2 Active, Input 3 Active, Input 4 Active, Input 5 Active, SOS/Input 1 Inactive, Input 2 Inactive, Input 3 Inactive, Input 4 Inactive, Input 5 Inactive, Low Battery, Low External Power, Speeding, Enter Geo-fence, Exit Geo-fence, External Power On, External Power Off, No GPS Signal, Get GPS Signal, Enter Sleep, Exit Sleep, GPS Antenna Cut, Device Reboot, Impact, Heartbeat Report, and Heading Change Report. At the bottom right, there are 'Read' and 'Write' buttons for the event list.

Item	Description
GPRS	Select TCP/UDP to enable GPRS communication.
GPRS Interval	Track by time interval via GPRS. Set time interval for GPRS tracking. Interval is in unit of 10 seconds. Interval = 0, stop tracking by time interval. Max time interval = 65535*10 seconds
GPRS Report Times	= 0, report without limit. = [1,65535], set report times, MVT380 will stop reporting when it has sent the report this many times.

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 16 - of 21
Revision:	V2.4	Confidential:	External Documentation

IP & Port	Input server's IP address and port number.
Secondary IP and Port (Backup Server)	Input backup server's IP address and port number to avoid losing data when main server is down. The backup server will receive data automatically.
APN APN user name APN password	APN, APN username, APN password: max 32 bytes. If no username and password required, leave them blank.
Tracker ID	MVT380's IMEI. It is the only ID in GPRS packet.
Read	Read current tracker's settings for above items.
Write	Write above settings to the tracker.

Tick the box for receiving GPRS report.

Event Description:

Event	Description (If the box is ticked, authorized phone number will get event report by SMS or calling)
SOS/Input 1 Active	Report when input1 (SOS) is active/pressed.
Input 2 Active	Report when input 2 is active.
Input 3 Active	Report when input 3 is active.
Input 4 Active	Report when input 4 is active.
Input 5 Active	Report when input 5 is active.
SOS/Input1 Inactive	Report when input 1 inactive (SOS released).
Input 2 Inactive	Report when input 2 inactive.
Input 3 Inactive	Report when input 3 inactive.
Input 4 Inactive	Report when input 4 inactive.
Input 5 Inactive	Report when input 5 inactive.
Low Battery	Report when backup battery's voltage is below 3.5V.
Low External Power	External power (car battery) is lower than predefined voltage. You can define voltage in Main Settings.
Speeding	Report when MVT380 speeds higher than the pre-set value. Value can be changed on tap III Main Settings
Enter Geo-fence	Report when MVT380 enters Geo-fence.
Exit Geo-fence	Report when MVT380 exits Geo-fence. Geo-fence can be changed on tap III Main Settings .
External Power On	Alarm when external power supply is on or recover.
External Power Off	Alarm when external power supply if off or cut.
No GPS Signal	Report when MVT380 enters GPS blind area or no GPS signal.
Get GPS Signal	Report when MVT380 exits GPS blind area or get GPS signal.
Enter Sleep	Report when MVT380 enters sleep mode.
Exit Sleep	Report when MVT380 exits sleep mode.

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 17 - of 21
Revision:	V2.4	Confidential:	External Documentation


	Sleep mode can be changed on tap III Main Settings .
GPS Antenna Cut	Alarm when the GPS antenna is disconnected or cut
Device Reboot	Report when MVT380 is rebooting.
Impact	Alarm when MVT380 (with impact sensor) detects impact or crash
Heartbeat Report	Turn on heartbeat report You can define heartbeat interval on tap III Main Settings .
Heading Change Report	Auto report when MVT380's direction changes over predefined angle You can define angle degree on tap III Main Settings .
Distance Interval Report	Track by distance. Interval can be changed on tap III Main Settings .
Tow Alarm	Alarm when the tracker trembles for a period of time. You can define tow time on tap III Main Settings .

For more information about GPRS settings, please refer to MEITRACK SMS/GPRS Protocol.

7 Installation

7.1 Install I/O Cable

The I/O cable is a 16-pin cable including power, analog input, negative/positive input and output.

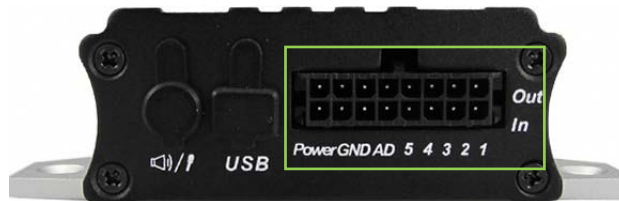

16 Power(+)	15 GND(-)	14 AD Input 2	13 Output 5	12 Output 4	11 Output 3	10 Output 2	9 Output 1
8 Power(+)	7 GND(-)	6 AD Input 1	5 Input 5	4 Input 4	3 Input 3	2 Input 2	1 Input 1


PIN Number	Color	Description
1 (IN1/SOS)	White	Digital Input 1 (negative triggering)
2 (IN2)	White	Digital Input 2 (negative triggering), for detecting status of vehicle door.
3 (IN3)	White	Digital Input 3 (negative triggering), for detecting status of vehicle door or ACC.
4 (IN4)	White	Digital Input 4 (positive triggering), for detecting status of vehicle door.
5 (IN5)	White	Digital Input 5 (positive triggering), for detecting status of vehicle door or ACC.
6 (AD1)	Blue	10 Bits Resolution Analog Inputs. 0~6V DC Detection. It can be used to connect with temperature/fuel sensor etc.
7 (GND)	Black	Ground
8 (POWER)	Red	DC In (power source). Input voltage: 9V~36V. 12V suggested.
9 (OUT1)	Yellow	Output1. It can be used to connect with relay for engineer immobilization.

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 18 - of 21
Revision:	V2.4	Confidential:	External Documentation


		Low voltage (0V) when effective and open drain (OD) when ineffective. Output open drain sink voltage (ineffective): 45V max. Output low voltage sink current (effective): 500mA max.
10 (OUT2)	Yellow	Output2. It can be used to connect with relay for engineer immobilization. Low voltage (0V) when effective and open drain (OD) when ineffective. Output open drain sink voltage (ineffective): 45V max. Output low voltage sink current (effective): 500mA max.
11 (OUT3)	Yellow	Output3. It can be used to connect with relay for engineer immobilization. Low voltage (0V) when effective and open drain (OD) when ineffective. Output open drain sink voltage (ineffective): 45V max. Output low voltage sink current (effective): 500mA max.
12 (OUT4)	Yellow	Output4. It can be used to connect with relay for engineer immobilization. Low voltage (0V) when effective and open drain (OD) when ineffective. Output open drain sink voltage (ineffective): 45V max. Output low voltage sink current (effective): 500mA max.
13 (OUT5)	Yellow	Output5. It can be used to connect with relay for engineer immobilization. Low voltage (0V) when effective and open drain (OD) when ineffective. Output open drain sink voltage (ineffective): 45V max. Output low voltage sink current (effective): 500mA max.
14 (AD2)	Blue	10 Bits Resolution Analog Inputs. 0~6V DC Detection. It can be used to connect with temperature/fuel sensor etc.
15 (GND)	Black	Ground. It can be used to connect with temperature/fuel sensor etc.
16 (POWER)	Red	DC In (power source). Input voltage: 9V~36V. 12V suggested. Same as PIN8

7.1.1 Power/GND (PIN7/PIN8)

Connect GND (-Black) and Power (+Red) wires to the battery of vehicle.

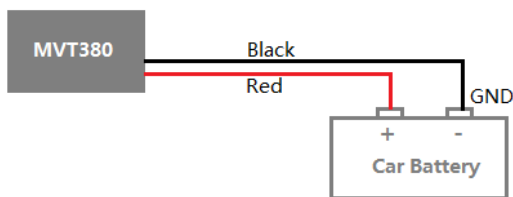


7.1.2 Digital Input (PIN1/PIN2/PIN3 Negative Triggering)




File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 19 - of 21
Revision:	V2.4	Confidential:	External Documentation

7.1.3 Digital Input (PIN4/PIN5 Positive Triggering)

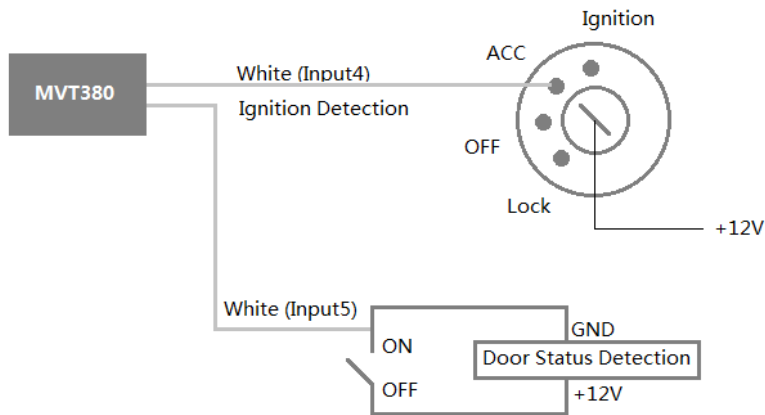

7.1.4 Output (PIN9/PIN10/PIN11/PIN12/PIN13)

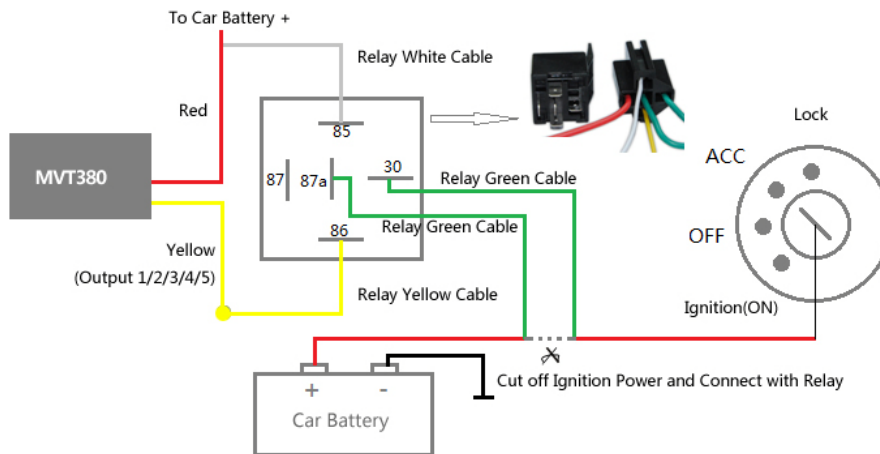

7.1.5 Analog Input (PIN6/PIN14)

7.1.5.1 Analog Input Application 1– Detect External Power Voltage

Input range: 0-6V


Voltage Calculating Formula: $\text{input voltage} = (\text{AD} \times 6) / 1024$

$0x0377 \Rightarrow 887(\text{Decimal}) \Rightarrow (887 \times 6) / 1024 = 5.1972\text{V}(\text{Voltage})$

$0x02FB \Rightarrow 763(\text{Decimal}) \Rightarrow (763 \times 6) / 1024 = 4.4707\text{V}(\text{Voltage})$

File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 20 - of 21
Revision:	V2.4	Confidential:	External Documentation

7.1.5.2 Analog Input Application 2 – Fuel Detection (percentage of fuel)

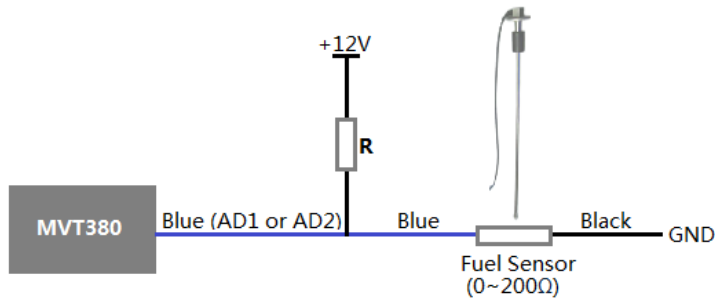

Note:

Fuel level sensors supplied by our company are resistance-type sensors with output resistance: 0-200Ω (ohm).


For the circuit shown on above figure, if VCC is 12V, R should be 200Ω (ohm) and if VCC is 24V then R should be 600Ω (ohm) to make the input range to AD1 or AD2 is 0-6V.

Below formula is for calculating the fuel percentage left for this fuel level sensor:

$$\text{Percentage Left} = \frac{\text{AD value}}{1024 * 2 - \text{AD value}} * 100\%$$

The value must be converted into decimal, for example, 0x0267 is 615 in decimal.

7.2 Install GPS/GSM Antenna

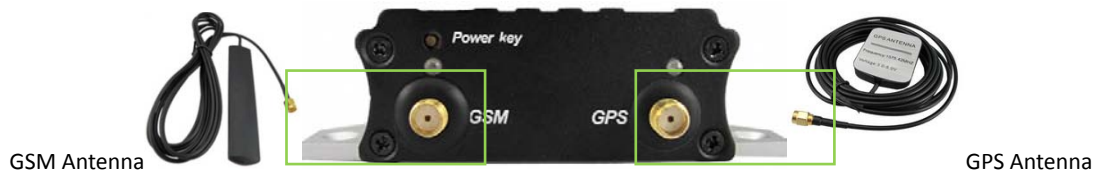

Connect the GSM antenna to the SMA connector which is 'GSM' text labeled. The GSM antenna is non-directional, so you can hide it in any place of vehicle.


Connect GPS antenna to the GPS connector which is 'GPS' labeled. The optimum location for the GPS antenna is on the roof of the vehicle. The covert and GPS antenna are directional, make sure they are facing up and lying as flat as possible. Secure them in place with glue or zip ties.

Note: Do not shield or cover the GPS antenna with any objects containing metal.

7.3 Install Microphone and Speaker (Optional)



File Name:	MEITRACK MVT380 User Guide	Creator:	Cavana Cheung
Project:	MVT380	Creation Date:	2010-08-26
		Update Date:	2012-07-03
Sub Project:	User Guide	Page:	- 21 - of 21
Revision:	V2.4	Confidential:	External Documentation

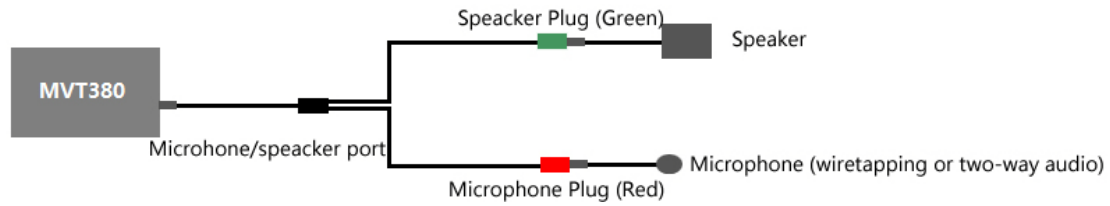

7.4 Mount the MVT380 unit

If mounting required, there are 4 screw holes on the MVT380, 2 along either side that act as fixing points to the vehicle.



Please do not hesitate to email us at info@meitrack.com if you have any questions.